
Goal: This PDF reader must replace the old PDF reader.

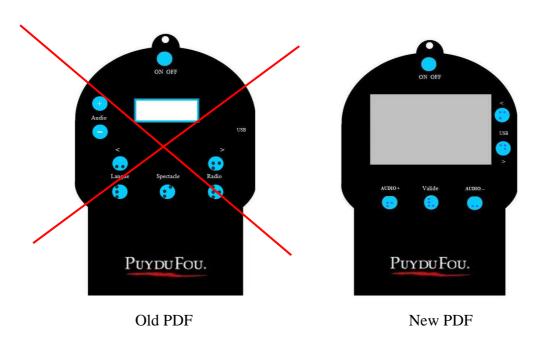

Technical sheet:

The new PDF is equipped with:

- 1 A color video display
- 2 Six Control Buttons
- 3 A large capacity SD card

Software:

One MP4 Video Player

An mp3 player

One FM receiver from 68 Mhz to 108 Mhz

A priority receiver (see document below)

Description of the different elements

The Video Player allows you to offer the viewer a description of the different services of the site The MP3 player FM receiver from 68 MHz to 108 MHz allows to offer the spectator music And translations of shows

A priority receiver makes it possible to signal a priority alert on the site in order to warn all the spectators of an alert in progress

Description of the player



ON OFF: Off On <: Scrolling up >: Scrolling Down

Audio +: Audio volume +
Audio -: Audio Volume Valid: validates commands
Screen: allows you to see the
Different menus and

Presentation videos


The MP4 files are on the micro SD card MP3 files are on the micro SD card The translation files are on the micro SD card See organization below

Example organizing the micro SD card

Table of addresses Menu Files	The address table is used to point the beginning of each group of files, Menus, MP4, MP3, translation.
MP4 Video Files	Menu Files contains all menus to be displayed on the screen for selecting commands MP4 Video Files contains videos and
	MP3 files contains sounds and titles
MP3 sound files	Translation files contains sounds for translation and titles
Translation files	

All files must be modified by the client so on the SD card

Synoptic player

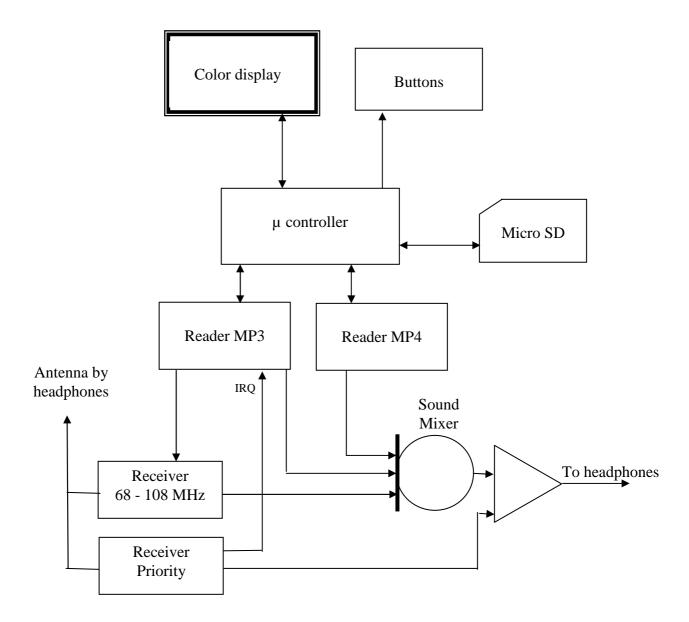

If the priority transmitter is switched off the system is operating normally

If the priority transmitter is turned on then it triggers an IRQ which puts the player in alert mode on the screen and broadcasts of the priority transmitter are broadcast in the headphones If the player is in standby mode (off) the alert mode must turn it on as if pressed the ON / OFF button

Note the frequency of the priority transmitter is not yet known

Manual

On power-up by ON / OFF the screen offers different choices

Bienvenue

Vidéo

MP3

Radio FM

Traduction

Choix par < > & Valide

Vidéo

Le demier Panache

Bal des Oiseaux Fantômes

Mousquetaire de Richelieu

Les Vikings

Le secret de la Lance

Le signe du Triomphe

Les Orgues de Feu

Cinéscénie

The choice of **Bal des oiseaux fantôme**Valid button

To stop video or end video

Back to menu by Valide.

To exit video mode ON / OFF button

Bienvenue
Vidéo
MP3
Radio FM
Traduction
Choix par < > & Valide

MP3

Le demier Panache
Bal des Oiseaux Fantômes
Mousquetaire de Richelieu
Les Vikings
Le secret de la Lance
Le signe du Triomphe
Les Orgues de Feu
Cinéscénie

The choice of
Le secret de lance
Valid button
To stop video or end video
Back to menu by Valid.
To exit video mode ON / OFF button

Bienvenue
Vidéo
MP3
Radio FM
Traduction
Choix par < > & Valide

FM

FM

96.50 MHz

The choice of FM Valid button To change music keys <> To exit video mode ON / OFF button

Bienvenue
Vidéo
MP3
Radio FM
Traduction
Choix par < > & Valide

Translation

Langue

English
Nederlands
Audio description
Español
Deutsch
Русский

English

Spectacle

A B C

D

Here Spectacle language English frequency B To change show keys <> To change the language button Valid

To change the language button Valid To exit video mode ON / OFF button

If possible if stopped the reader it must restart it on the language already chosen Here language English

The buttons are provided with protruding pins for the visually impaired

Page Alerte

Alert

Follow the instructions
In your headphones

On activation of the priority transmitter an alert message is displayed on the screen in the language chosen by the user is a siren sounds from the headphones.

At the end of the siren the setpoints are given by the priority transmitter in the headphones